

Wi-Fi Manual



DayBetter APP

V1.2

Install APP and Log in

Install 'DayBetter' APP on your phone

Method 1 : Search and download 'DayBetter' APP on APP store or Google Play.

**NOTE: APP name is 'DayBetter'.
Do NOT use any other APP.**

Method 2 : Scan or click the QR code below and switch to APP store or Google Play to download.



DayBetter



1. New user please create account first.
2. You can either log in by password or by email verification code after registration.

Password login

Verification code login

————— New users of DayBetter? —————

Create an account

Turn on phone Wi-Fi and Bluetooth

Turn on bluetooth and Wi-Fi on your smart phone and connect phone to 2.4GHz hotspot. (After configed device online, you can switch phone to other hotspot)



Note:

1. 5GHz WiFi is not supported.
(Tip: 2.4GHz signal penetrates walls better than 5GHz.)
2. The 2.4GHz and 5GHz 2-in-1 hotspot mostly is OK for the device.
Have a try. If the device failed to connect online, please setup 2.4GHz and 5GHz hotspot separately. Then connect device to the 2.4GHz hotspot.

Reset Device

Once a device is configured online, it must be reset before it can be configured by another account.

How to reset a product:

For a light:

Plug in and plug out power supply for 3 or 4 times, till the lights flash indicating successful reset.

It is sequence like 'on-off-on-off-on', and please note that one 'on' period should be 2 ~ 4 seconds.

For a smart socket:

Hold the button on device for 5 seconds until the LED flashes indicating successful reset.


For a device with remote:

If the product is accompanied with one IR remote, you can aim the remote to controller, hold 'ON' key for about 5 seconds until the lights flash indicating successful reset.

Add device and configure it online


Click "Go to search" to search nearby devices.

Click "Add", then the device will be added to your device list.

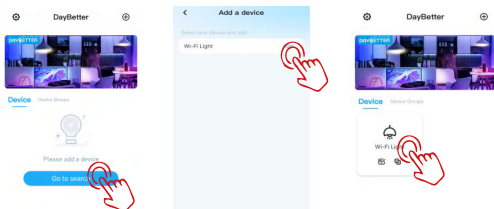


Go on to connect device to WiFi on device info page.


- NOTE:**
1. Make sure connect device to a 2.4GHz hotspot.
 2. Move device close to WiFi router to help connecting.
 3. Try again if fail which may happen rarely.
 4. If still fail, reset device and retry connect.

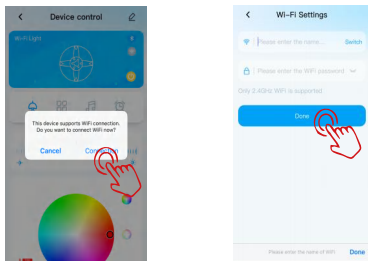

Wait for connecting. After the connection is complete, click "OK".

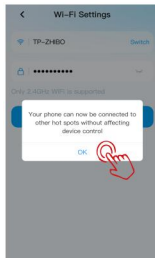

Device detail information.

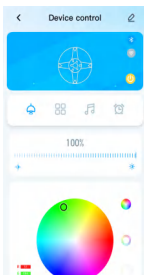

Setting Wi-Fi


Remove device



Link Alexa or Google Home

Method 1: Bind Alexa on DayBetter APP(Recommended)

- (1) Go to APP setting page and click Alexa tab to call LINK page.
- (2) Then just click 'Link' on the link page.
- (3) Wait a second. Done. You can find online device on Alexa.

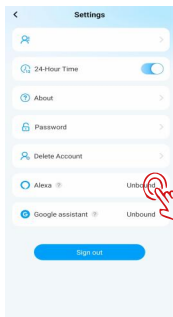

Note: Ensure the device is WiFi-connected and Alexa APP already logged in, before you link to Alexa.

Method 2: Bind DayBetter on Alexa APP(NOT recommended)

Search and enable 'DayBetter' skill on Alexa APP.

Please scan or click the QR code for more help.




Please scan or click the QR code for how to link Google Home.




Main User Interface

1.Device status information.

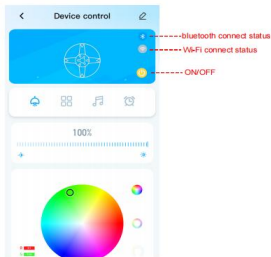

2.Dimmer: Change the color, adjust brightness.

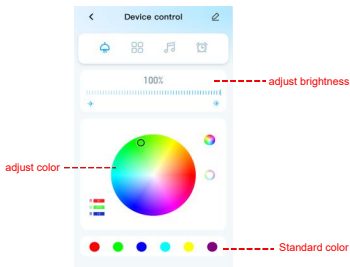

Trouble Shooting

a) APP can not find the device.

- Make sure the phone bluetooth is on.
- Allow the permissions of APP. APP needs them to connect.
- Check the light is on.
- Kill APP, turn off bluetooth and turn on bluetooth again, then start APP to add device again.
- Ensure phone within 4ft from product when connecting.
- Your phone may be incompatible with the APP, try another phone.

b) Failed to connect to Wi-Fi.

- Check Wi-Fi supports 2.4GHz. Not 5GHz.
- Reset device, and try again.
- Bring device close to Wi-Fi router to improve signal.
- Add device and connect it to Wi-Fi again.

c) Device not shown on Alexa APP.

- Remove device from DayBetter APP and add again.
- Unlink Alexa, and Link Alexa again.

d) All lights don't work.

- Check power is on.
- Press ON and press "brightness up" multi times on remote.
- Connect APP and turn on light and turn up brightness.
- Reinstall all parts.

e) Contact seller support for more help.